



KODAK VERITÉ Craft 6


WIRELESS ART & CRAFT PRINTER

JF383UC






Quick Craft Guide

1 Overview



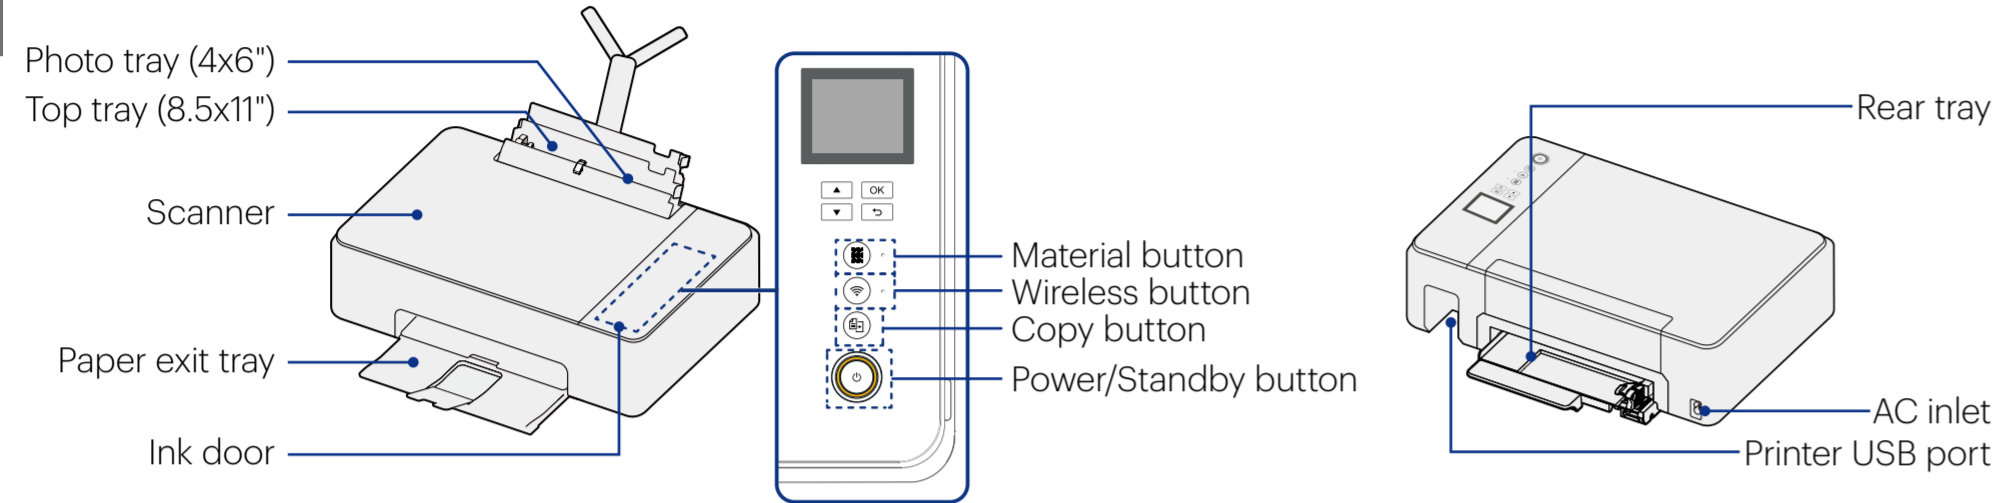


2 Selecting Material




a Select material type on the control panel of printer or through the App.

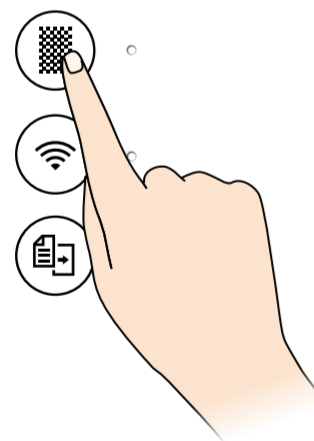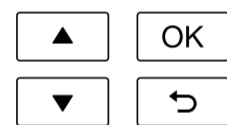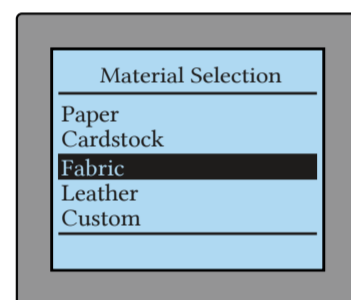

b Display will show material selected and where to load.

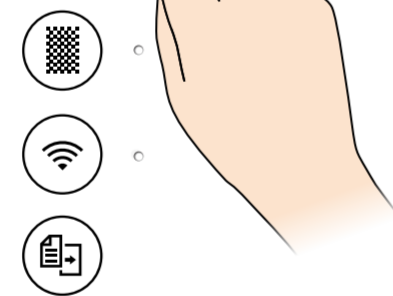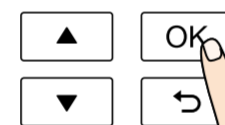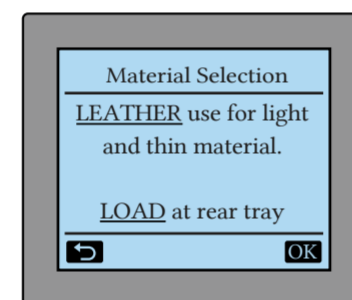

c Confirm setting by pressing **OK**.

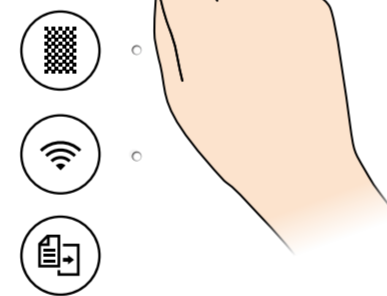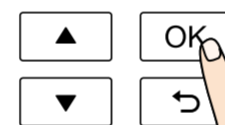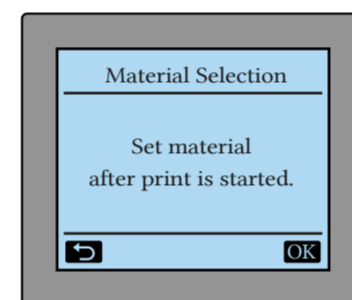

	Material	Weight
Top tray	Plain paper	17 - 24 lb. 64 - 90 g/m ²
	Photo paper (Glossary)	50 - 65 lb. 180 - 240 g/m ²
	Envelope	20 - 24 lb. 75 - 90 g/m ²
	Card	90 - 110 lb. 163 - 200 g/m ²

	Material	Details
Rear tray	Cardstock	Used for greeting, photo and decoration cards
	Fabric	Used for lightweight cotton or cotton/polyester fabrics
	Leather	Used for faux leather
	Custom	Custom settings allows you to select optional materials through the KODAK VERITÉ Craft app (iOS/Android). For more information download the KODAK VERITÉ Craft app and select Tutorial under Print your own Design.


Note(s)
 The KODAK VERITÉ Craft printer can accept a maximum material thickness of 1.2 mm (0.05") through the rear tray.
 Non-rigid materials need to be handled carefully during loading as the material might bend and cause a jam. The best way is to support the material during loading with two flat hands into the rear tray.
 Thin flexible materials should be taped to a paper carrier to keep it flat during printing as long as the overall thickness does not exceed 1.2 mm (0.05").
 Make sure that the material selected are printable. For example some of the vinyl materials cannot be used as the ink will smear/not dry. Please use only printable vinyl or add an Inkjet print primer (not included) to you material
 Make sure that materials loaded through the rear input tray don't have rough edges, strings or loose parts may cause the printer to jam.

3 Loading Material


a Select a material type "cardstock/fabric/faux leather/custom" on the printer or through your tablet/smartphone app.
 When "paper" is selected, printing will be done through the top or photo tray.
 When cardstock, fabric, faux leather or custom is selected, printing will be done through the unique craft rear tray.
 Material settings will be held by the printer until the printer goes into sleep mode (default 10 minutes).
 The printer's default material setting is for paper.



b Open or create a content file or photo to be printed on your PC, tablet or smartphone. Print the content and wait until the printer display shows "Place the material on the rear tray and push material into the tray".

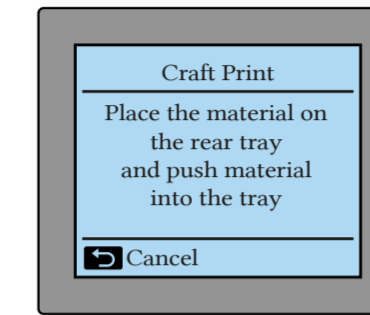

c Load the material with two flat hands gently into the printer until you feel some resistance (level depends on thickness of material) and the printer display shows **OK**.

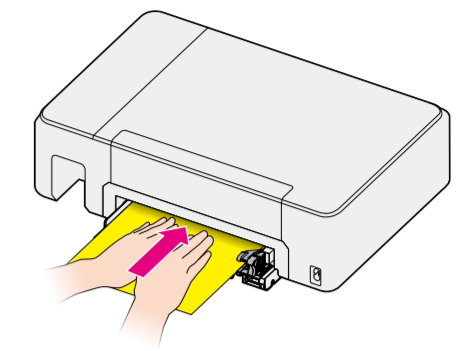

Note(s)
 For the best printing results please use print with border as it is difficult to print accurate edge to edge with thicker craft materials.

4 How to Print from Your Device

PC/Laptop

a Download a PC driver using the following URL.



b Install the PC driver and set up your printer via USB or Wi-Fi by following the on-screen instructions.

c Create and print your personal images or photos by using your favorite 3rd party software (not included) from your PC/Laptop.

Tablet and Smartphone App

a Search "kodak verite craft" at App Store or Google Play.



b Install "KODAK VERITÉ Craft" App.

c Create and print your personal images by selecting "Print Your Own Design" from the KODAK VERITÉ Craft App.

Bonus Anna Griffin Design Templates

ENJOY FREE BONUS MATERIAL

Install the KODAK VERITÉ Craft app (iOS/Android) from the app store and instantly access to bonus craft content.

Discover the KODAK VERITÉ Craft printer features videos on:
www.kodakverite.com/printer/kodak-craft

Learn more: additional help and information
www.kodakverite.com/support

The Kodak trademark, logo and trade dress are used under license from Kodak.

© 2017 Funai Electric Co., Ltd. All rights reserved.

